


# REPLACEMENT PARTS - MODEL RM5520R

## 2-CYCLE CHAINSAW

PPN 41BY85AG983

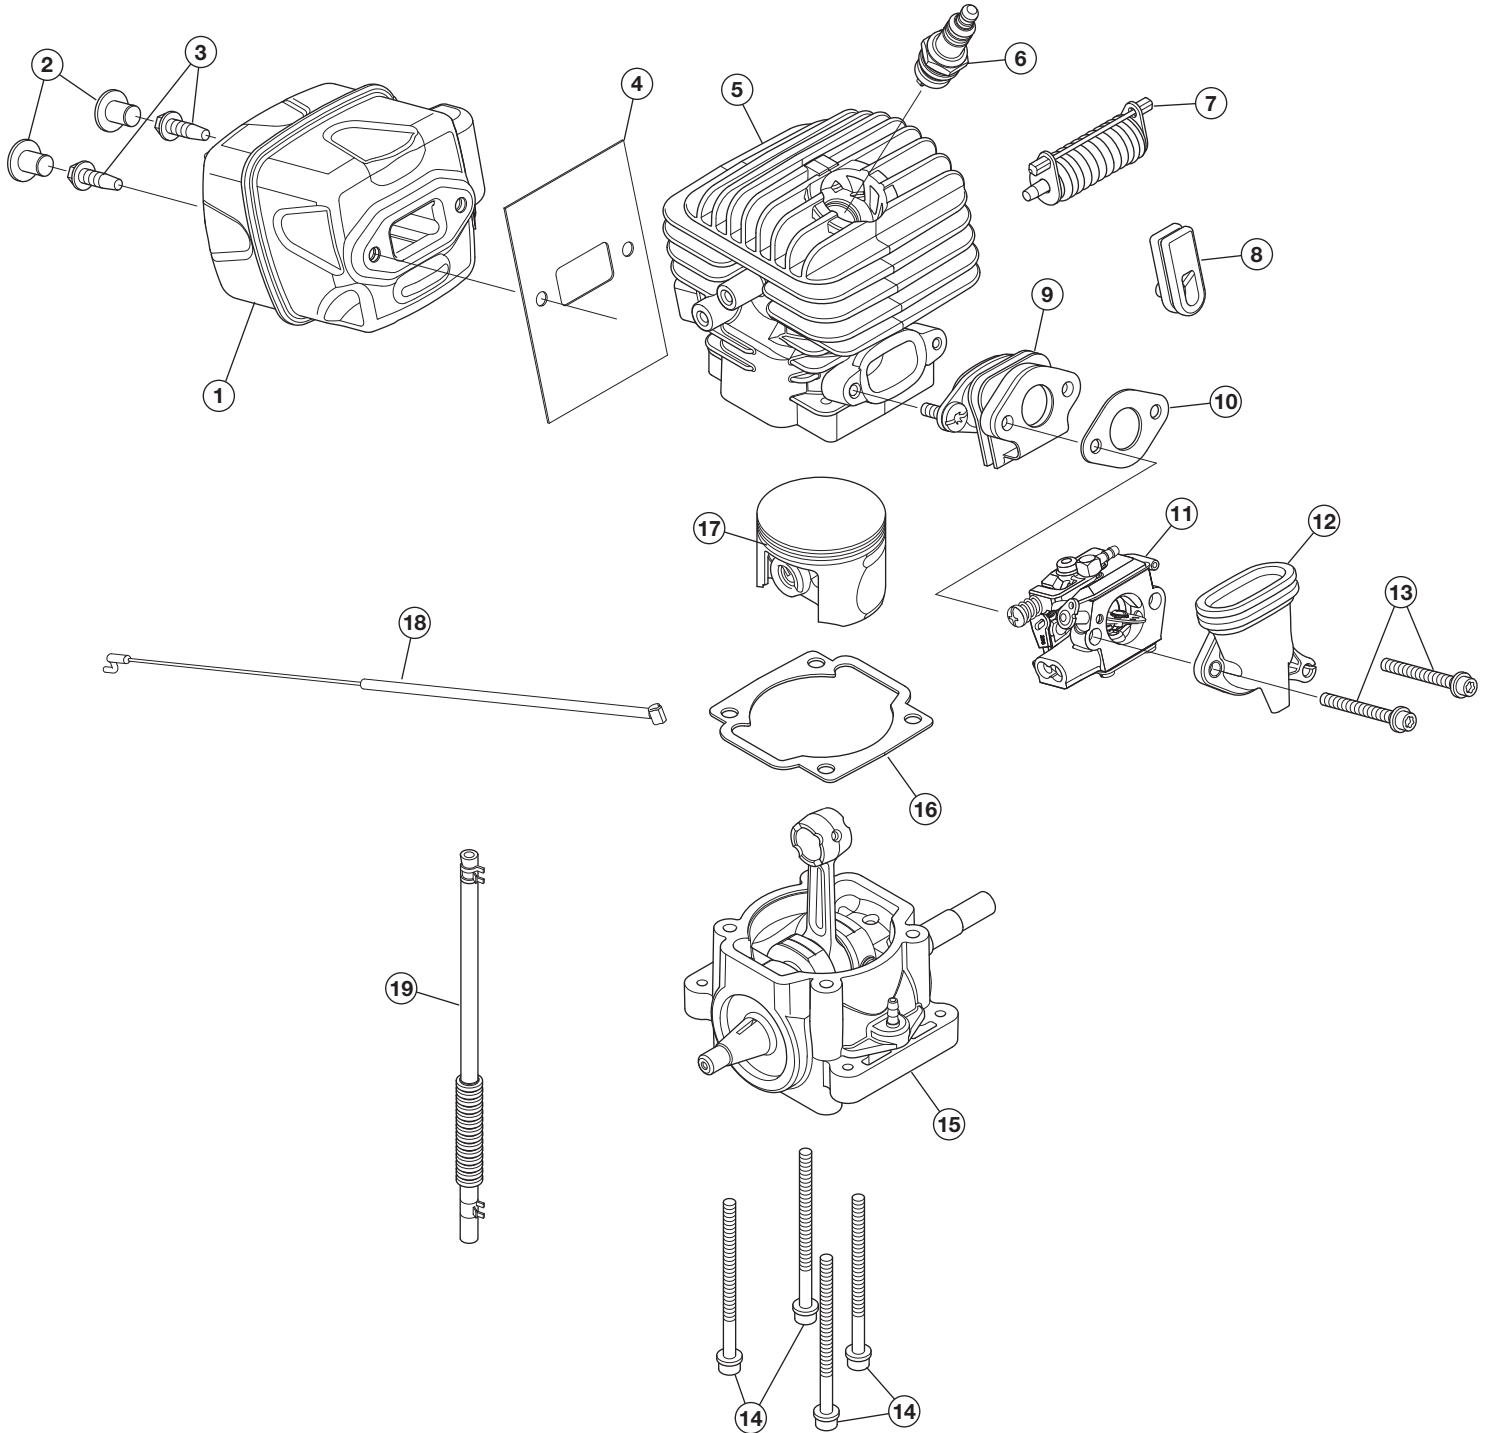


Item	Part No.	Description
1	753-06268	Muffler Assembly (includes 2, 3 & 4)
2	753-06507	Muffler Plug
3	753-06397	Muffler Screw
4	753-06398	Muffler Gasket
5	753-06742	Cylinder Assembly
6	753-06269	Spark Plug
7	753-06404	Isolator Assembly
8	753-06411	Grommet
9	753-06727	Insulator Assembly
10	753-06406	Carburetor Gasket

Item	Part No.	Description
11	753-06728	Carburetor
12	753-06385	Boot & Bracket Assembly (includes 8 & 18)
13	753-06410	Carburetor Hardware
14	753-06402	Cylinder Hardware
15	753-06744	Shortblock Assembly (includes 4 - 10)
16	753-06400	Cylinder Gasket
17	753-06401	Piston Assembly
18	753-06409	Throttle Cable
19	753-06726	Breather Hose (with Clamp)

# REPLACEMENT PARTS - MODEL RM5520R 2-CYCLE CHAINSAW

PPN 41BY85AG983

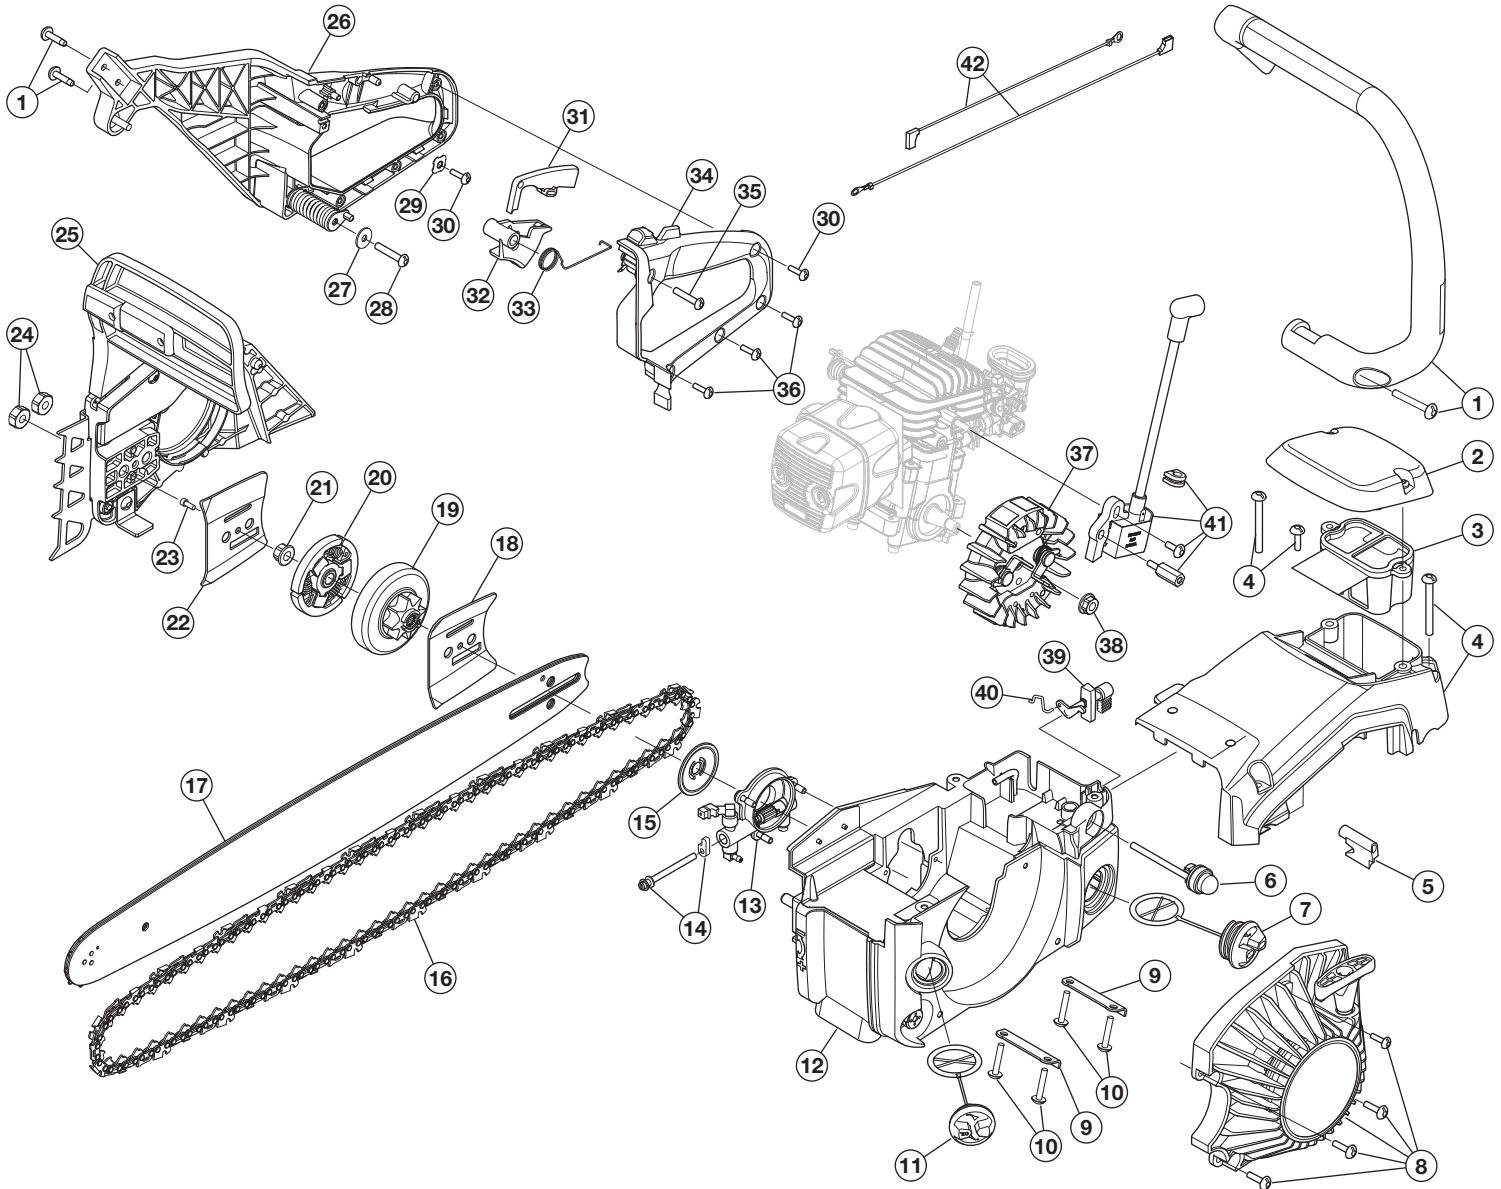

Item	Part No.	Description
1	753-06483	Handle Assembly (with Screws)
2	753-06458	Air Cleaner Cover Assembly
3	753-06457	Air Cleaner Assembly
4	753-06456	Top Cover Assembly
5	753-06739	Boot
6	753-06425	Primer Bulb Assembly
7	753-06978	Fuel Cap
8	753-06974	Starter Housing Assembly
9	753-06431	Engine Mount Plate Assembly (includes 10)
10	753-06429	Engine Mount Screw
11	753-06505	Oil Cap
12	753-06730	Housing Assembly (includes 6, 7 & 11)
13	753-06387	Oil Pump Assembly
14	753-06484	Tension Screw & Nut Assembly
15	753-06451	Oil Pump Shield
16	713-04099	20" Chain
17	753-06975	Chain Guide Bar
18	753-06740	Inner Guide Plate
19	753-06450	Clutch Drum Assembly
20	753-06449	Clutch
21	753-06461	Clutch Nut
22	753-06488	Outer Guide Plate
23	753-06487	Guide Plate Screw

Item	Part No.	Description
24	753-06460	Chain Guide Bar Nut
25	753-06973	Chain Brake Assembly
26	753-06738	Rear Handle Assembly
27	753-06477	Grip Anti-vibration Washer
28	753-06478	Grip Anti-vibration Screw
29	753-06479	Throttle Clamp Washer
30	753-06470	Throttle Clamp Screw
31	753-06735	Trigger Release
32	753-06736	Throttle Trigger
33	753-06466	Trigger Release Spring
34	753-06734	Rear Handle Cover Assembly (with Switch)
35	753-06467	Upper Grip Screw
36	753-06468	Lower Grip Screw
37	753-06976	Flywheel Assembly
38	753-06427	Flywheel Nut
39	753-06737	Choke Lever Assembly
40	753-06474	Choke Rod
41	753-06432	Module Assembly
42	753-06510	Ground Wire

\* Items Not Shown  
 \* 753-06489 Case  
 \* 753-06490 Wrench